




Hamm Hw90

Machine Visibility Seat RH

rev. 003

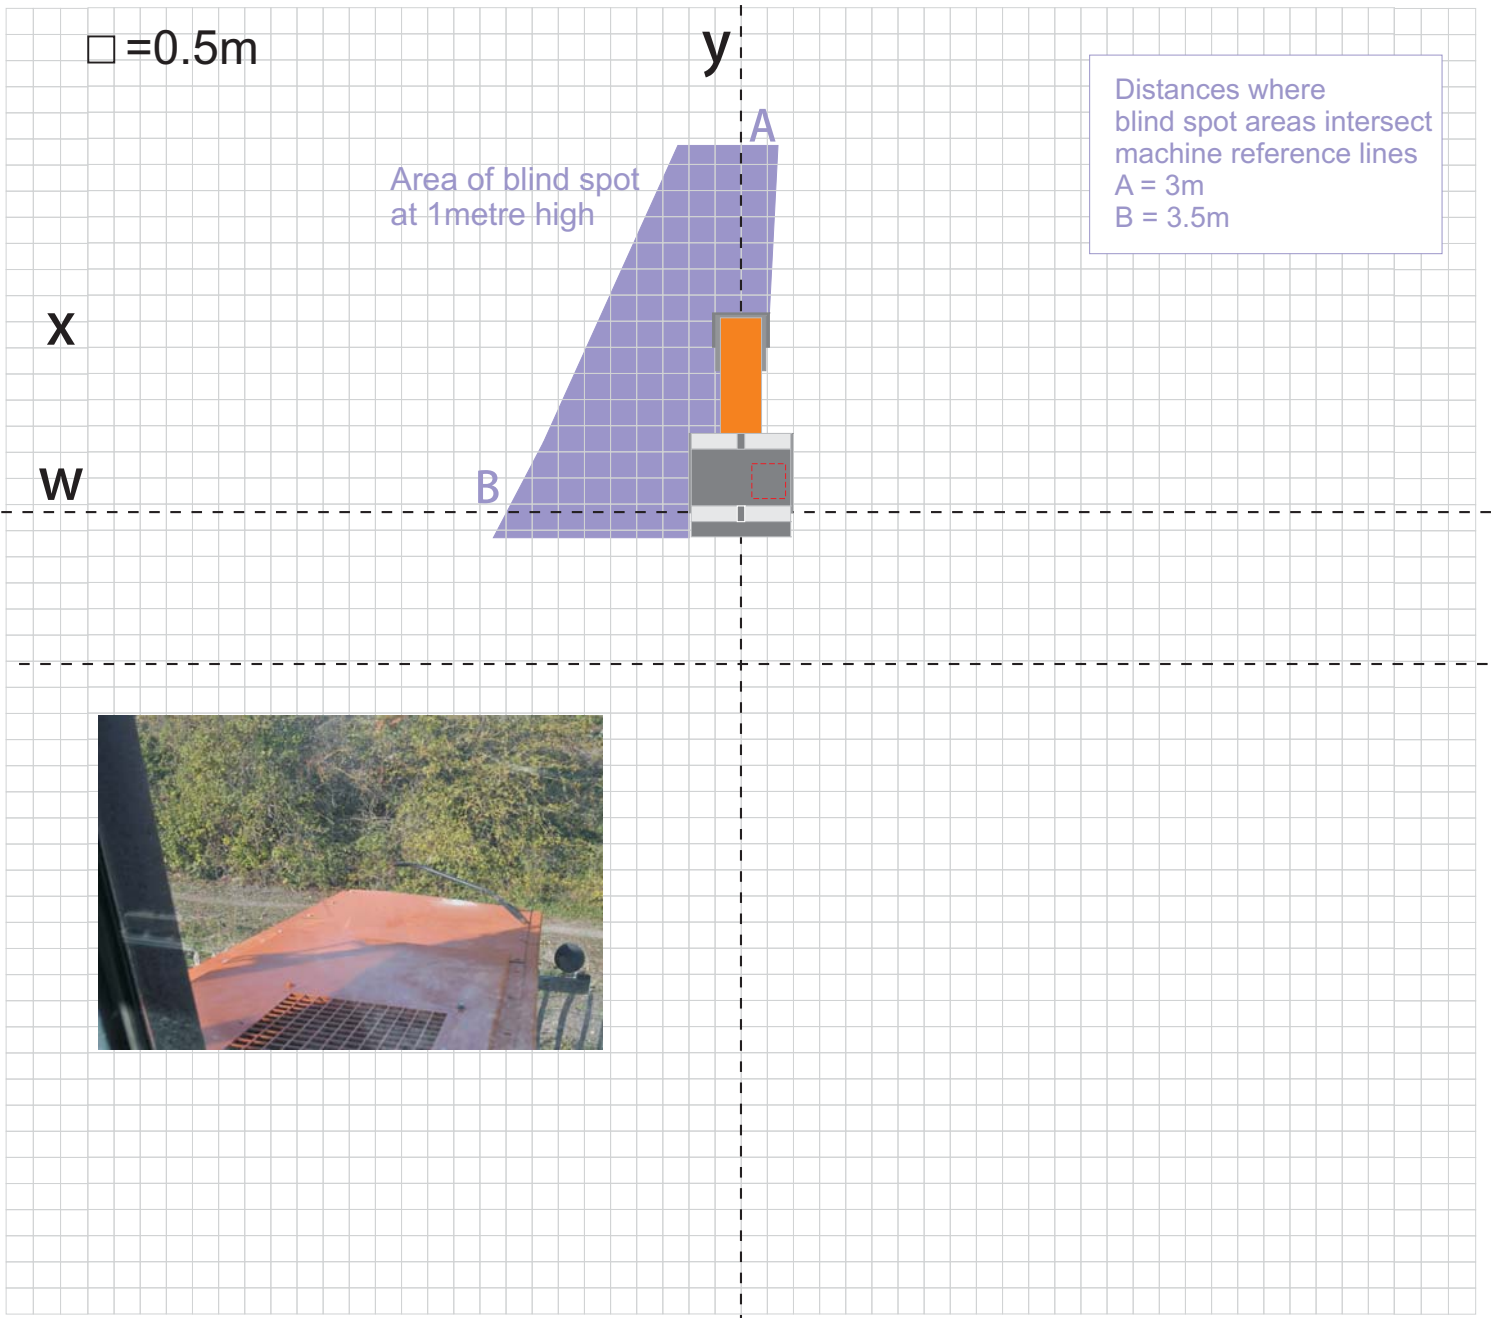




Hamm Hw90

Enhanced Visibility Seat RH

rev. 003

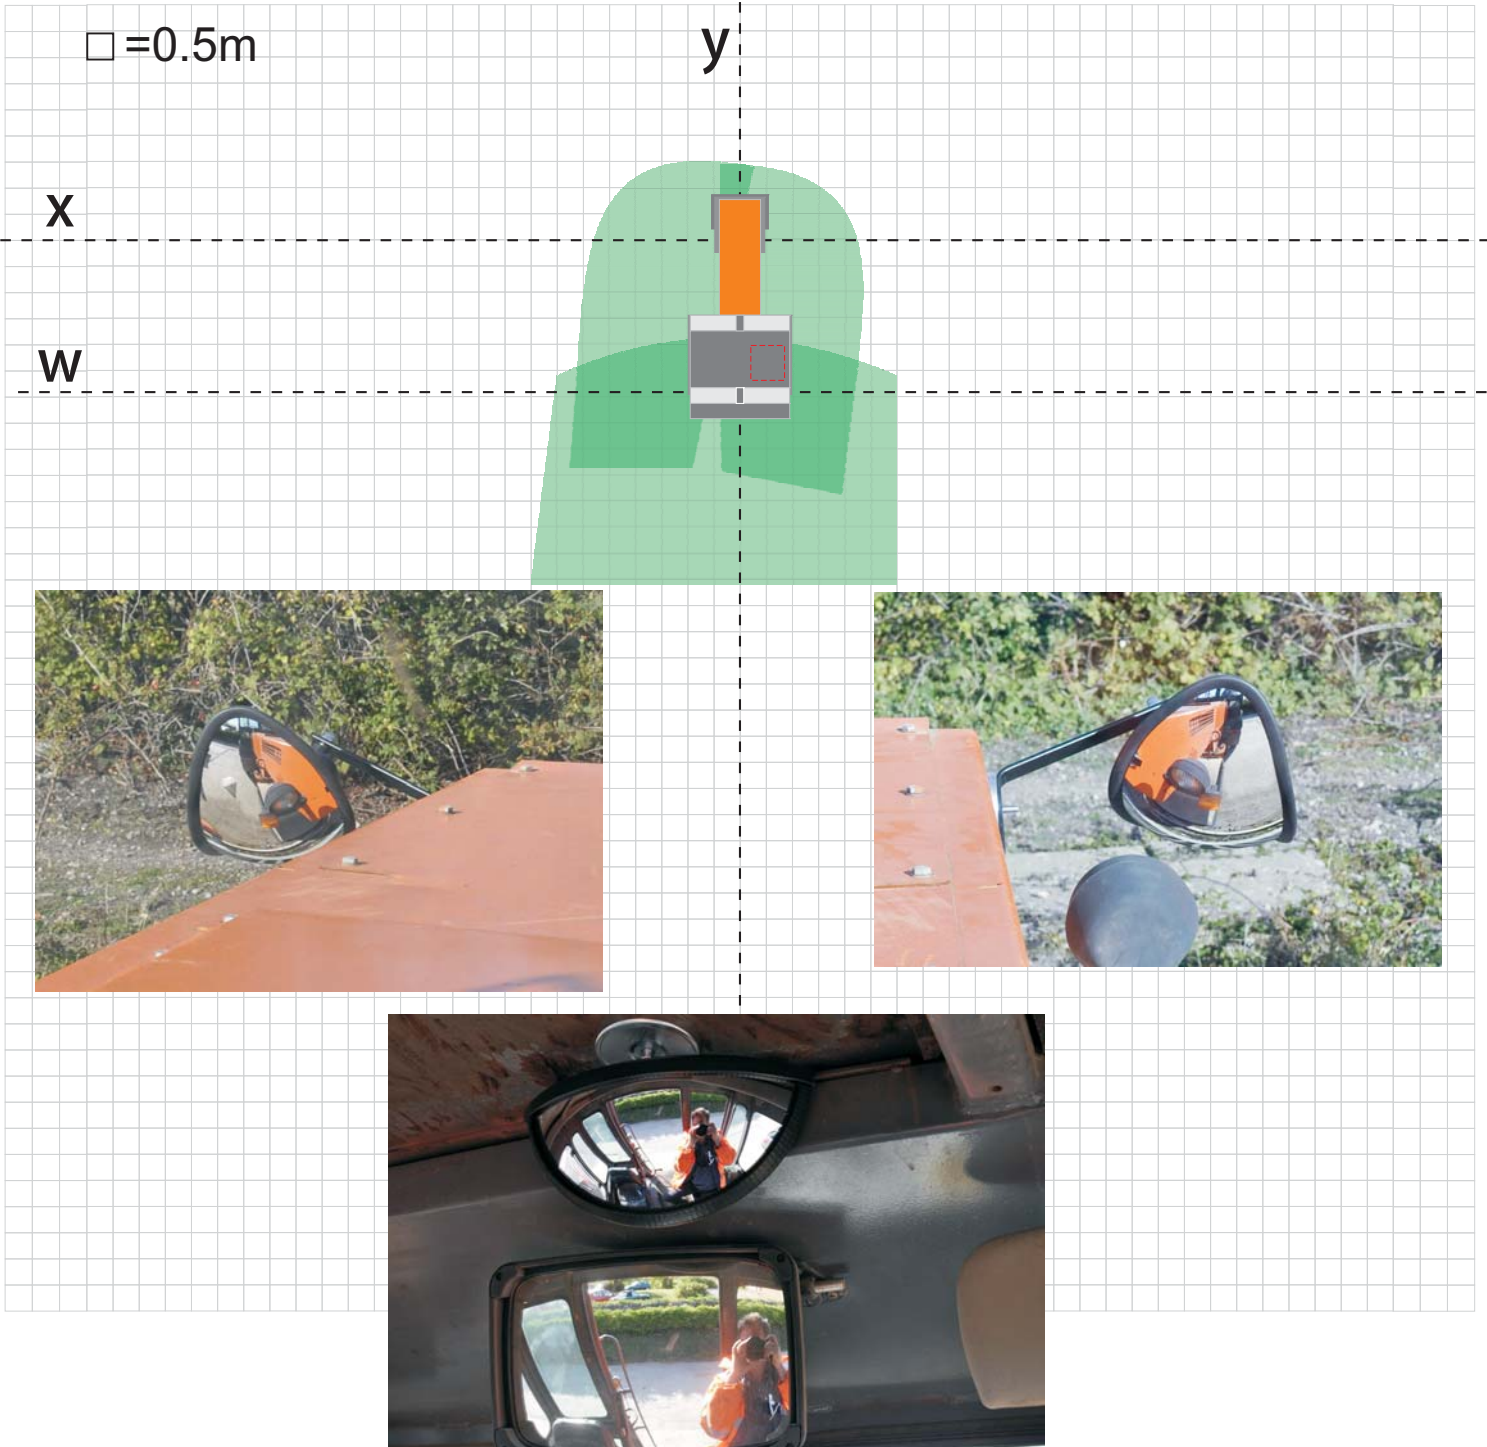

Recommendations

2 x Sc010 convex mirrors

1 x FLT052 Interior mirror


To effectively utilise the Sc010 convex mirrors the front light arrangements would need relocating, to ensure the mirrors produce no glare at night.



Hamm Hw90

Comparison

rev. 003

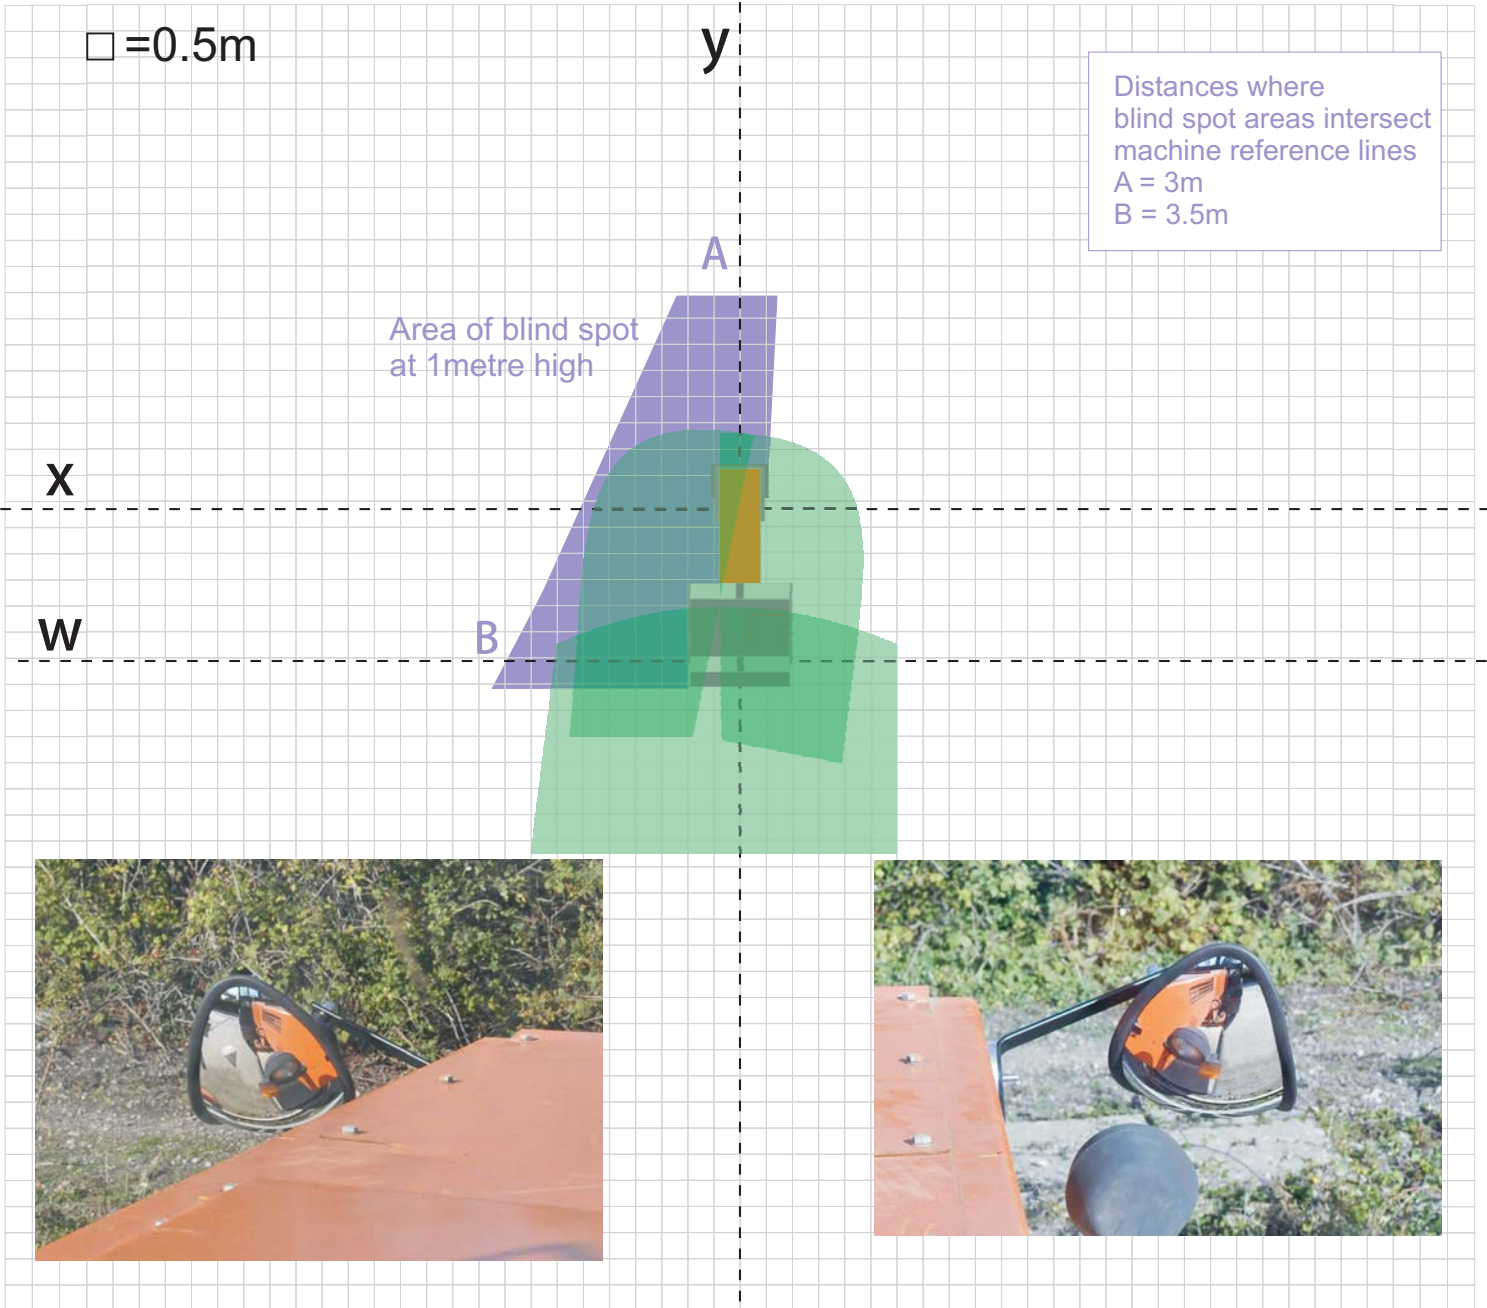



Hamm Hw90

Enhanced Visibility

Seat RH

rev. 003

To further improve visibility an Hd052 convex mirror could be mounted onto the front bonnet this would allow for approx. 3metres of enhanced vision to the front of the machine. To ensure the maximum amount of visibility is achieved the mounting arm would need to extend out from the front by approx. 500mm this arm would therefore have to be spring mounted to provide protection when the Hw90 is transported.

